

DRIVER UTILITY BH-0927 Driver 1.0

All rights reserved. Copyright 2014

Driver DVD Revision History

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3. The sequence of setup is UTILITY --> VGA --> ME --> LAN --> SOUND --> USB3 (USB3 is only for WIN7 32/64 bit)

=====
=====

DRIVER DVD CONTENT

=====
=====

Driver\---+--->\Flash BIOS\AFU.bat

|
|

+--->\Platform\Win7(32-bit)\UTILITY\infinst_autol.exe (Intel Chipset Software Installation Utility only for windows OS)

|
|

+--->\Platform\Win7(32-bit)\VGA\Win32_153117.exe (WIN7/8 32bit DRIVER)

|
|

+--->\Platform\Win7(32-bit)\ME\Setup.exe (WIN7/8 32/64 bit DRIVER)

|
|

+--->\Platform\Win7(32-bit)\LAN\PROWin32.exe (WIN7/8 32bit DRIVER)

```
|
|
+---->\Platform\Win7(32-bit)\Sound\32bit_Vista_Win7_Win8_R270.exe
(WIN7/8 32bit DRIVER)
|
|
+---->\Platform\Win7(32-bit)\USB3\Setup.exe (WIN7 32/64 bit DRIVER)
|
|
+---->\Platform\Win7(64-bit)\UTILITY\infnst_autol.exe (Intel Chipset
Software Installation Utility only for windows OS)
|
|
+---->\Platform\Win7(64-bit)\VGA\Win64_153117.exe (WIN7/8 64bit
DRIVER)
|
|
+---->\Platform\Win7(64-bit)\ME\Setup.exe (WIN7/8 32/64 bit DRIVER)
|
|
+---->\Platform\Win7(64-bit)\LAN\PROWinx64.exe (WIN7/8 64bit
DRIVER)
|
|
+---->\Platform\Win7(64-bit)\Sound\64bit_Vista_Win7_Win8_R270.exe
(WIN7/8 64bit DRIVER)
|
|
+---->\Platform\Win7(64-bit)\USB3\Setup.exe (WIN7 32/64 bit DRIVER)
|
|
+---->\Platform\Win8(32-bit)\UTILITY\infnst_autol.exe (Intel Chipset
Software Installation Utility only for windows OS)
|
|
+---->\Platform\Win8(32-bit)\VGA\Win32_153117.exe (WIN7/8 32bit
DRIVER)
|
```

```
|
+---->\Platform\Win8(32-bit)\ME\Setup.exe (WIN7/8 32/64 bit DRIVER)
|
|
+---->\Platform\Win8(32-bit)\LAN\PROWin32.exe (WIN7/8 32bit
DRIVER)
|
|
+---->\Platform\Win8(32-bit)\Sound\32bit_Vista_Win7_Win8_R270.exe
(WIN7/8 32bit DRIVER)
|
|
+---->\Platform\Win8(64-bit)\UTILITY\infinst_autol.exe (Intel Chipset
Software Installation Utility only for windows OS)
|
|
+---->\Platform\Win8(64-bit)\VGA\Win64_153117.exe (WIN7/8 64bit
DRIVER)
|
|
+---->\Platform\Win8(64-bit)\ME\Setup.exe (WIN7/8 32/64 bit DRIVER)
|
|
+---->\Platform\Win8(64-bit)\LAN\PROWinx64.exe (WIN7/8 64bit
DRIVER)
|
|
+---->\Platform\Win8(64-bit)\Sound\64bit_Vista_Win7_Win8_R270.exe
(WIN7/8 64bit DRIVER)
```

MANUAL\AdbeRdr930_en_US.exe (PDF File reader)

```
=====
=====
```

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in DVD-ROM for BIOS update.

a. This is found in DVD:\Driver\Flash BIOS\AFU.bat

BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE, AFU.BAT and "BIOS BIN file

(ex.H927XXXX.BIN)" (*the flash drive need more than 16MB free space.)

b. Use flash drive to boot, then type "AFU H927XXXX.BIN" and press enter to automatically flash BIOS.

(ex. C:\>afu H927XXXX.BIN <enter>)

2. The system has LAN function (Intel 82583V) that can support various network adapters. The content of the LAN driver is found as follows:

a. Windows 7_32bit / Windows 7_64bit / Windows 8_32bit / Windows 8_64bit

3. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with

Windows 7 you will find the content of the Sound driver.

a. Windows 7_32bit / Windows 7_64bit / Windows 8_32bit / Windows 8_64bit

4. The Main Chip directory is contained in DVD-ROM for INTEL HM86 Driver

a. Windows 7_32bit / Windows 7_64bit / Windows 8_32bit / Windows 8_64bit

5. The VGA interface (Intel(R) HD Graphic Driver) is embedded with our system to support

CRT display and LVDS. The following illustration briefly shows you the content of VGA driver in sub-directory \VGA\

- a. Windows 7_32bit / Windows 7_64bit / Windows 8_32bit / Windows 8_64bit
- b. There is Intel USB3.0 just support WIN7 32/64 bit

6. IntelR USB 3.0 eXtensible Host Controller

You will find the contents of the directory in the USB3.0

- a. Windows 7_32bit / Windows 7_64bit

**** Third party trademarks or brand names are the property of their owners.****