

| Brightness | 350 cd/m² | | • 🖳 🖓 | |
|-----------------------------|---|--|--------|---------|
| Touchscreen | Projected Capacitive Touch | | | |
| Viewing Angle | Horizontal: (R) 85°/(L) 85° / Vertical: (U) 80°/(L) 80° | | | |
| Estimated luminance lifetim | ne 50,000h | | | DM Tray |
| Integrated Devices | | | | |
| Thermal Printer | Epson TM-T70II | | | μ μ |
| Barcode Reader | FS5002J | | LITELI | |
| IC讀卡機 | SKH301-1000C | | | |
| 悠遊卡機 | 虹堡TS-2000 | | | Door |
| Environment | | | | |
| Operating Temp. | 5°C~ 35°C (41°F ~ 95°F) | | | |
| Storage Temp. | 0°C~ 60°C (32°F~ 140°F) | | | |
| Humidity | 20%~ 85% | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

PROTECH SYSTEMS

KF-7270 17" Self-Service Kiosk with P-Cap Touch

Quick Setup

Connect the AC power cord to the AC power jack,

Step 1.

Step 2.

Use your hand to release the screw on the printer door and open it.



Safety Precaution

The following messages are reminders for safety on how to protect your system from damages and extend a long system life.

- · Don't allow foreign objects to fall into this product.
- · If water or other liquid spills into this product, unplug the power cord immediately.

1. Check the Cable Voltage

4. Good Care • When the outside of the case is stained, remove the stain with a neutral washing agent with a dry

- Make sure the range of operating voltage between AC 100~240V. Otherwise, the system could be damaged.
- 2. Environmental Conditions
 - Place your KF-7270 on a sturdy, level surface. Be sure to allow enough space to have easy access around the system.
- · Avoid extremely hot or cold place to install the system.
- Avoid exposure to sunlight for a long period of time or in an airtight space.
- Avoid the system from any heating device or using it outdoors in a cold winter day.
- Bear in mind that the operating ambient temperature is from 5°C~35°C (41°F~95°F).
- Avoid moving the system rapidly from a hot place to a cold one and vice versa for condensation may come from inside of the system.
- Place KF-7270 in strong vibration(s) may cause hard disk failure.
- · Don't place the system close to any radio active device in case of signal interference.
- 3. Handling
 - If the system isn't fully in DOS mode, adjust BIOS setting as the instruction: Advanced Chipset Feature \rightarrow Boot display \rightarrow choose "LFP".
 - · Avoid putting heavy objects on top of the system.
- Don't turn the system upside down. This may cause the hard drive to malfunction.

- cloth.
- · Never use strong agents such as benzene and thinner to clean the system. If heavy stains are present, moisten a cloth with diluted neutral washing agent or with alcohol and then wipe thoroughly with a dry cloth.
- If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computers
- · Don't contact the surface of capacitive touch before entering your operation system, or capacitive touch may have position problems for electrostatics interface.
- Don't exchange the M/B battery by yourself or serious damage may incur.

All Rights Reserved. Copyright 2018