


Packing Checklist


If you discover any item below are damaged or lost, please contact your vendor immediately.

MH-5106

☐ MH-5106 Integrated Padx1☐ This Quick Reference Guidex1☐ AC Power Adaptorx1☐ Hand Strap (Optional)x1☐ Neck Strap (Optional)x1MH-5106 Driver Utilities and User Manual file have been stored in the Integrated Pad system:File Path: C:\MH-5106_v1.0

Specin	cations	System V
System		Front View
СРИ Туре	Actions S500 (ARM Cortex A9 R4 CPU)	Power LED
Memory Support	DDR3L 1GB / 2GB	Fower LED
0.S.	Android 5.1.1 (Linux Kernel 3.10)	267.84
Speaker	1W Speaker x 1	
Battery Pack	Main battery (7900mAh) & RTC battery	
Wi-Fi + Bluetooth module	802.11 a/b/g/n wireless LAN and Bluetooth 4.0 module	
G-Sensor	Accelerator sensor	
IP Rating	IP54 (front panel only)	
Dimension (LxWxT)	259.9 mm x 175.9 mm x 17.7mm	
System Weight	838g (without any optional devices attached)	
Power Supply	DC 12V/2A/24W	
Display		
LCD Panel	10.1" LED backlight LCD	
Touch Panel	10.1" PCT	
Max. Resolution	1280x800 dots WXGA	Side View
Integrated Devices (Option	al)	
Barcode Scanner	Honeywell 2D Barcode scanner	
3G Module	3.75G supports SIM card interface (onboard)	
NFC Module	NXP N-P300	
Rear Camera	5M pixels camera module with autofocus function	Scan Button –
MSR Module	Meet ISO 7811, support AAMVA / JIS II format, support single / dual / triple tracks	
Smart Card Reader Module	USB port (Meet ISO 7816 & EMV Level 1 & 2 Certification)	
Storage (SDIO Interface		
Storage	, 16GB / 32GB / 64GB eMMC	
External I/O Ports		
DC-IN Jack	1 x DC-IN Jack	
Cradle Connector	1 x POGO pins (1x10 pins)	
USB	Standard USB (Type A) x1 for external expansion	
SD (Secure Digital)	MicroSD Slot for internal memory expansion	
SIM Card Slot	For cellular network services	Bottom View
Audio Jack	Audio Jack x 1	
Environment		
Operating Temp.	0°C~ 40°C (32°F ~ 104°F)	
Storage Temp.	-20°C~ 60°C (-4°F~ 140°F)	POGO Pins
Operating Humidity	0%~ 90% (no condensation)	F OGO FIIIS

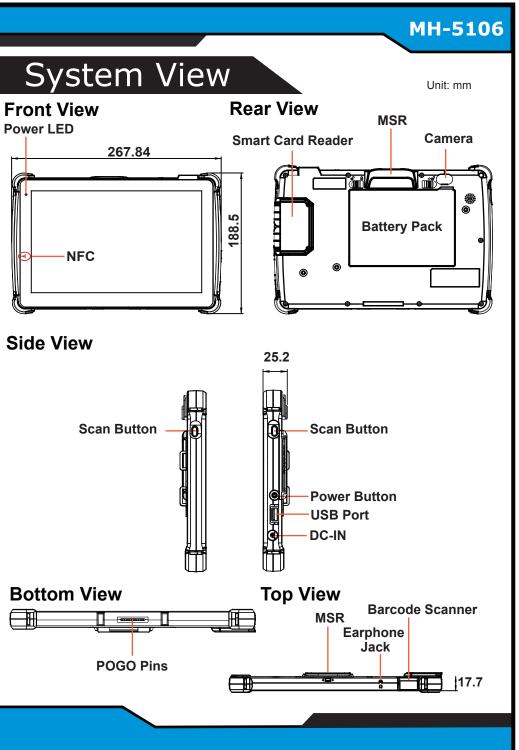

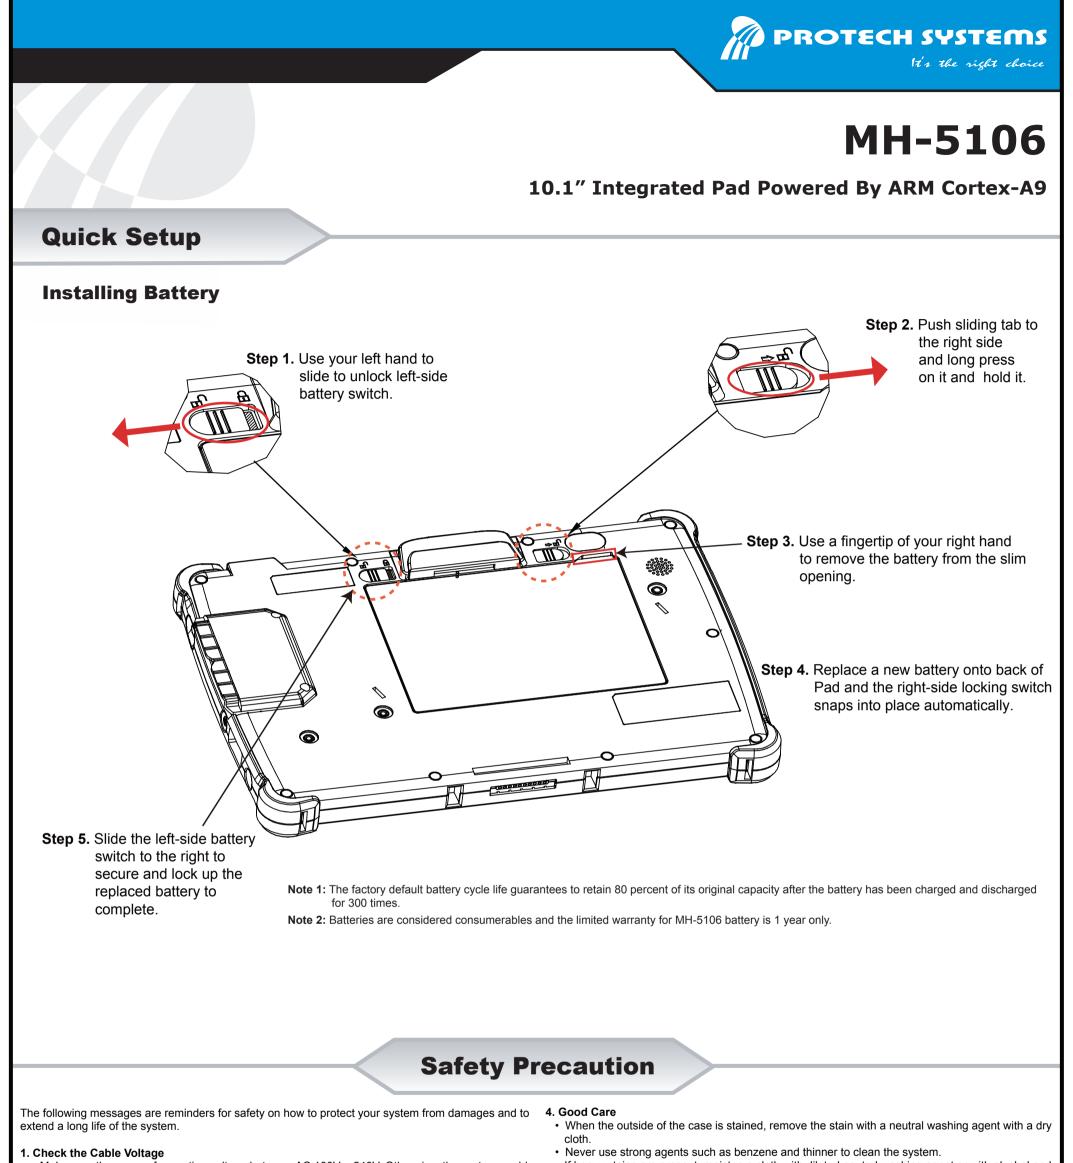

- Make sure the range of operating voltage between AC 100V ~ 240V. Otherwise, the system could be damaged.
- 2. Environmental Conditions
- Place your MH-5106 on a sturdy, level surface. Be sure to allow enough space to have easy access around the system.
- · Avoid extremely hot or cold place to install the system.
- Avoid exposure to sunlight for a long period of time or in an airtight space.
- Avoid the system from any heating device or using it outdoors in a cold winter day.
- Bear in mind that the operating ambient temperature is from 0 ~ 40°C (32 ~ 104°F).
- Avoid moving the system rapidly from a hot place to a cold place and vice versa because condensation may come from inside of the system.
- Don't place the system close to any radio active device in case of signal interference.

3. Handling

- · Avoid putting heavy objects on top of the system.
- Don't allow foreign objects to fall into this product.
- · If water or other liquid spills into this product, unplug the power cord immediately.

- If heavy stains are present, moisten a cloth with diluted neutral washing agent or with alcohol and then wipe thoroughly with a dry cloth.
- If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computers.
- Don't contact the surface of capacitive touch before entering your operation system, or capacitive touch may have position problems for electrostatics interface.
- Don't exchange the M/B battery by yourself or serious damage may incur.

CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

WARNING! Some internal parts of the system may have high electrical voltage. And therefore we strongly recommend that qualified engineers can open and disassemble the system. The LCD and Touchscreen are easily breakable, please handle them with extra care.

All Rights Reserved. Copyright 2017