

	Cash Drawer	1 + 1 (option, with Y cable) x RJ11 (+12V/+24V selectable)
	DC-In	1 x 4 pin DC Power Jack
Add-Ons	Customer Display	VFD, 20 columns and 2 lines, each column is 16 x 16 dots
	Printer	2" or 3" easy loading thermal printer with Auto-cutter
	MSR & iButton	JIS I or II, ISO Track1+2+3 (PS/2 interface)
	Fingerprint	8-bit grayscale reader
	2nd Display	7" TFT LCD, resolution: 1024x600, brightness: 220 cd/m ²
Display	LCD	15.6" TFT LCD
	Resolution	1366 x 768
	Brightness	220 cd/m ²
	Touchscreen	15.6" P-CAP touch panel, USB interface
	Tilt Angle	40 degrees
Environment	EMC & Safety	CE / FCC
	Operating Temp.	0°C ~ 35°C (32°F ~ 95°F)
	Storage Temp.	-5°C ~ 60°C (23°F ~ 140°F)
	Humidity	20% ~ 90%



PA-A901 Highly Integrated and High Performance 15.6" POS Terminal


Easy Maintenance

Step 1: Unfasten the two screws on both sides of the LCD Display, and open and rotate the LCD Display cover downwards as shown:




Step 2: Remove the 2 screws on the HDD tray as shown:

Step 3: Take out the HDD module to complete.

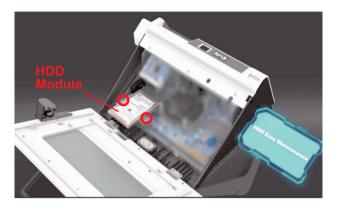

Jumper Setting

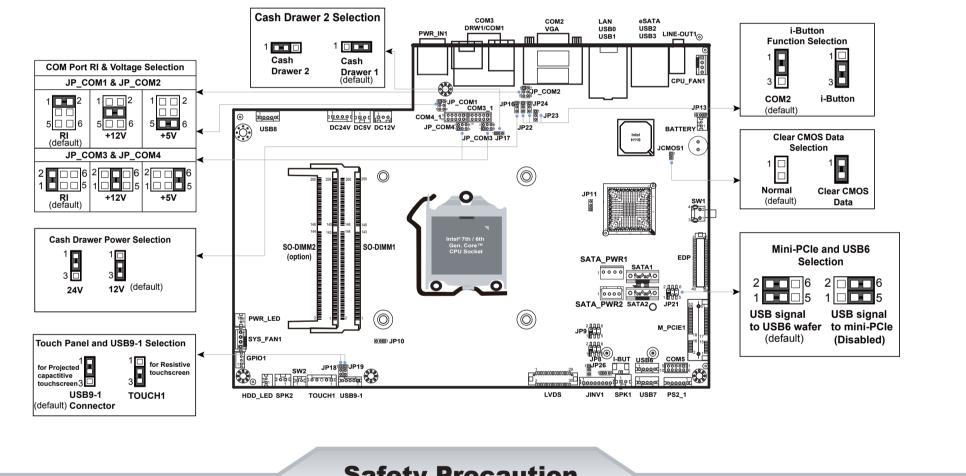

Safety Precaution

The following messages are reminders for safety on how to protect your systems from damages and to extend a long life of the system.

1. Check the Cable Voltage

- Don't allow foreign objects to fall into this product.
- · If water or other liquid spills into this product, unplug the power cord immediately. 4. Good Care
- · When the outside of the case is stained, remove the stain with a neutral washing agent with a dry
- Make sure the range of operating voltage between AC 100V ~ 240V. Otherwise, the system could be damaged.
- 2. Environmental Conditions
 - · Place your PA-A901 on a sturdy, level surface. Be sure to allow enough space to have easy access around the system.
- Avoid extremely hot or cold place to install the system.
- Avoid exposure to sunlight for a long period of time or in an airtight space.
- Avoid the system from any heating device or using it outdoors in a cold winter day.
- Bear in mind that the operating ambient temperature is from 0°C ~ 35°C (32°F ~ 95°F).
- · Avoid moving the system rapidly from a hot place to a cold place and vice versa because condensation may come from inside of the system.
- Place PA-A901 in strong vibration(s) may cause hard disk failure.
- Don't place the system close to any radio active device in case of signal interference.

3. Handling

- If the system isn't fully in DOS mode, adjust BIOS setting as the instruction: Advanced Chipset Feature => Boot display => choose "LFP".
- · Avoid putting heavy objects on top of the system.
- Don't turn the system upside down. This may cause the hard drive to malfunction.

- cloth.
- · Never use strong agents such as benzene and thinner to clean the system. If heavy stains are present, moisten a cloth with diluted neutral washing agent or with alcohol and then wipe thoroughly with a dry cloth.
- If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computers.
- Don't contact the surface of capacitive touch before entering your operation system, or capacitive touch may have position problems for electrostatics interface.
- Don't exchange the M/B battery by yourself or serious damage may incur.

CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

WARNING! Some internal parts of the system may have high electrical voltage. And therefore we strongly recommend that qualified engineers can open and disassemble the system. The LCD and Touchscreen are easily breakable, please handle them with extra care.

All Rights Reserved. Copyright 2019