


PA-J501

Quick Reference Guide

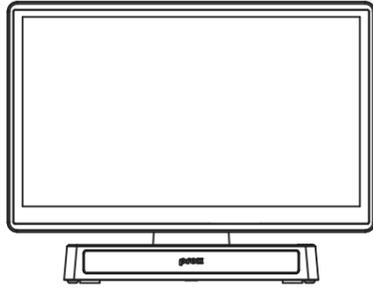

Ver. Q1

All Rights Reserved. Copyright 2022

Packing Checklist

If you discover any of the items below are damaged or lost, please contact your vendor immediately.

- PA-J501 X 1
- This Quick Reference Guide X 1
- Power Adaptor X 1
- AC Power Cord X 1
- Driver DVD X 1


Specifications

System	CPU Support	Intel® Celeron® J6412 (fanless)
	Memory	1 x DDR4 260-pin SO-DIMM slot (up to 16GB)
	Storage	1 x M.2 2242 / 1 x M.2 2280
	Network	1 x RJ45, 10/ 100/1000 Mbps / 1 x M.2 (Key E, 2230)
	O.S. Support	Windows 10, Windows 11
	Primary Display	15.6", 1366 x 768
	2nd Display	10.1" Monitor with Touch
	Audio	1 x 2W Speaker
	System Weight	POS: 4.23 kg / POS + 2nd Display: 5.33 kg
	Dimensions (WxHxD)	POS: 375.68 x 287.43 x 194.95 mm POS + 2nd Display: 375.68 x 287.43 x 213.26 mm
Storage	SATA	1 x M.2 2242 / 1 x M.2 2280, SATA interface
I/O Ports	Display	1 x Mini DP for Primary/ 2nd display 1 x HDMI 1.4
	USB	Rear I/O: 3 x USB 2.0 / 2 x USB 3.1 Side I/O: USB 2.0
	Serial Ports	2 x RJ45 (all support 5V/12V selectable under BIOS) (RS-232 interface)
	LAN	1 x 2.5G LAN (RJ45)
	Cash Drawer	1 x RJ11 (+12V or +24V selectable) (default at +24V)
	DC In	1 x 4-pin DC power jack (4pin, DIN)
	Option	1 x USB 2.0 or 1 x 24V Power USB (1A) or 1 x DC Out (1A) or 1 x RJ-45 (RS232 interface)
	Add-ons	Customer Display
	MSR	JIS I,II, ISO Track1+2+3 (USB interface)
	2nd Display	10.1" with P-cap touch
	Fingerprint	Silicon Fingerprint Module (USB interface)
	iButton	iButton module (USB interface)
	Scanner	2D scanner (USB interface)
Display	Primary Display	15.6", TFT LCD (Resolution: 1366 x 768) Brightness: 220 cd/m ²
	Touchscreen	Bezel-free P-CAP touch panel (USB interface)
	2nd Display	10.1" Monitor with Touch
Environment	EMC & Safety	CE / FCC
	Operating Temp.	0°C ~ 35°C (32°F ~ 95°F)
	Storage Temp.	-5°C ~ 60°C (23°F ~ 140°F)
	Humidity	20% ~ 90%


System View

Unit: mm


Front View

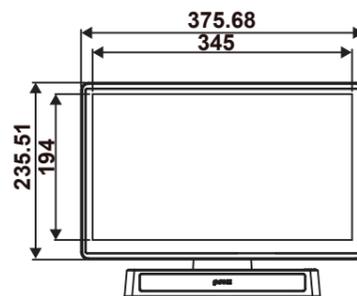


Side View

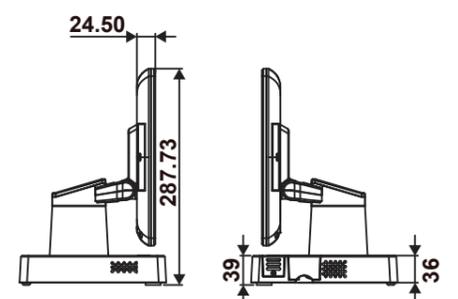

REAR I/O

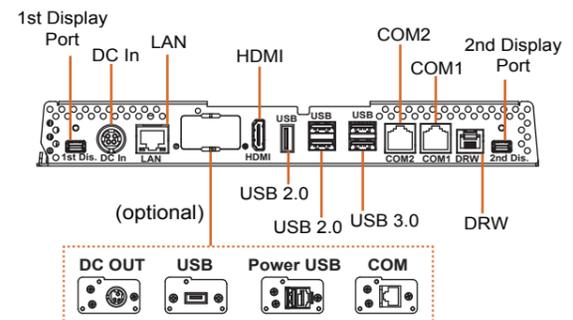

SIDE I/O

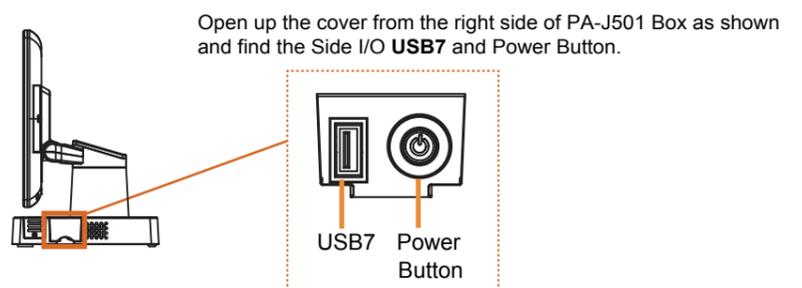


PA-J501 High Performance 15.6" POS Terminal

Easy Maintenance


M.2 2280 Maintenance

Step 1: Follow the arrow to turn the system touchscreen leftwards.

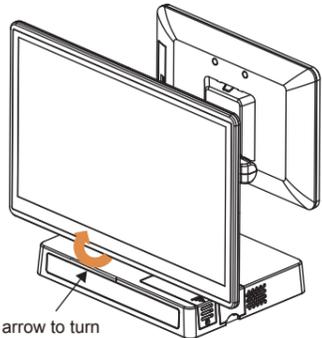


Follow the arrow to turn the system touchscreen leftwards.

Step 2: Unscrew M.2 2280 and follow the direction of red arrow (as shown) to release the cover.

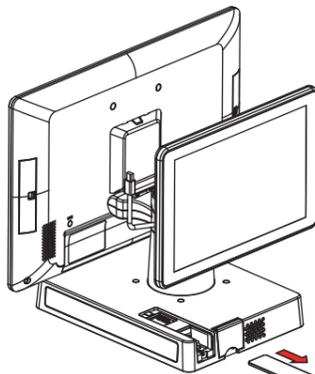

Unscrew M.2 2280 and follow the red arrow to open the cover.

Step 3: Slide a new M.2 2280 into the M.2 slot and fasten up the screw to secure the cover and complete.

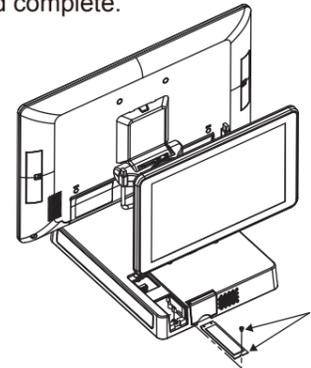


Slide a new M.2 2280 into the M.2 slot and fasten up the screw to secure the cover.

Please refer to the "How To Turn System Touchscreen" section below on how to turn the primary touchscreen properly.


Memory Maintenance

Step 1: Unplug the 2 Display Port cables from I/O Ports (1st Dis. and 2nd Dis. ports).

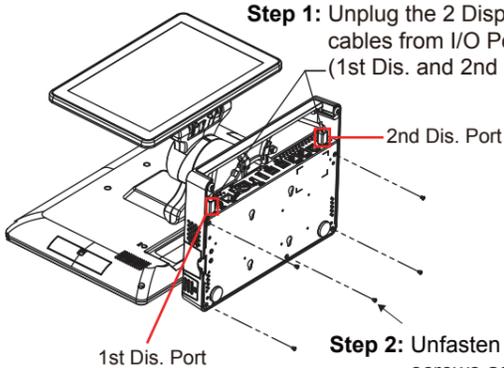


1st Dis. Port


Step 2: Unfasten the 4 screws as shown.

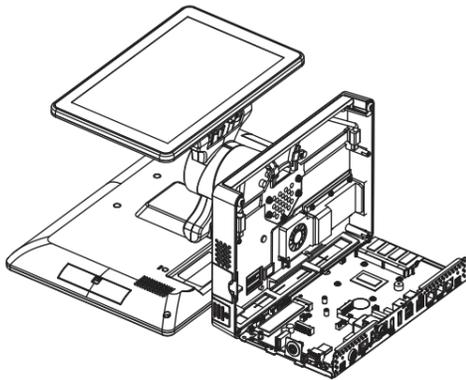

Step 3: Move the PCB box outwards slightly as shown (red arrow) and lay the PCB box down on a flat surface.

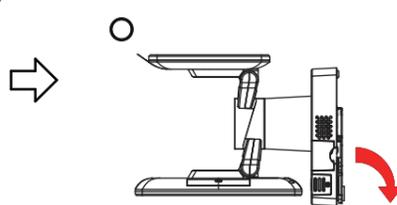

Warning: If you force to move the PCB Box too far away from the POS system, the connected cables inside the system could be damaged.

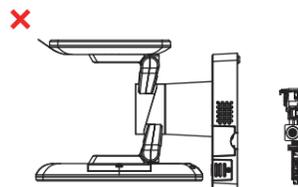

Step 4: Open the cover and unplug all the connected cables. (Remove the LED cable and Wi-Fi antenna if Wi-Fi function is available.)


Step 5: Change the memory and heating pad.

Step 6: Re-connect all the unplugged cables and replace all removed screws in the order you dismantled and complete.


How To Turn System Touchscreen

You can turn the POS touchscreen either way. Heed that after you turn the primary touchscreen to the rear side, you must turn the primary touchscreen only in the direction you previously turned.


PA-J501 System Top View

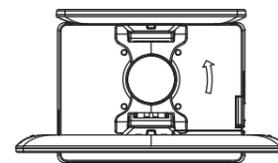


In this example, the primary touchscreen is to be turned leftwards.

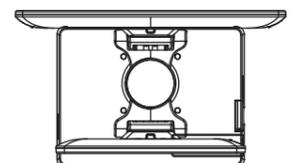

The primary touchscreen has been turned as illustrated.

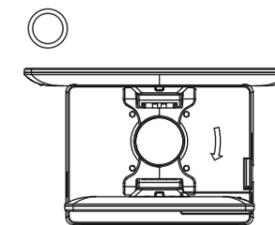


Important: Please turn the primary touchscreen only in the direction you previously turned.

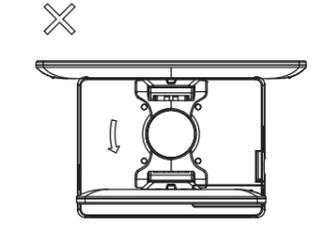

Warning: If you force to turn not in the direction you previously turned, the internal structure of the POS system could be damaged.

Jumper Setting

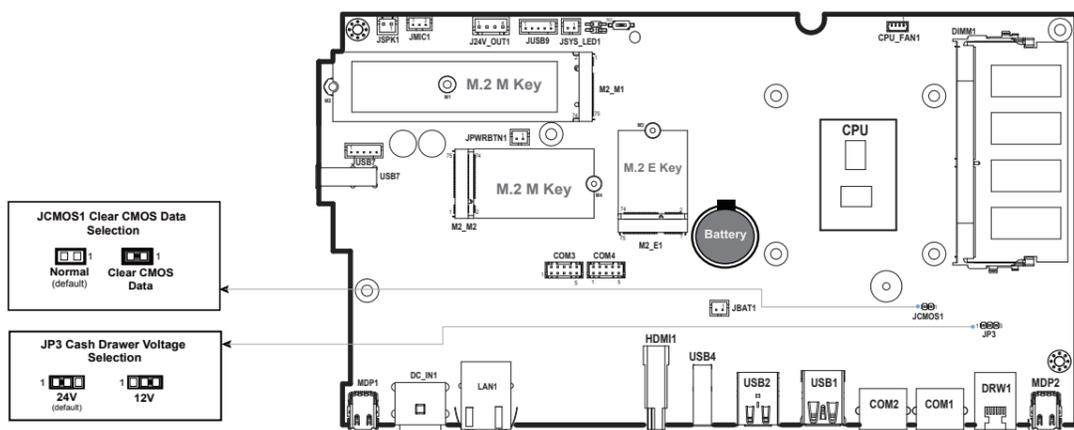

CAUTION! Danger of explosion may occur if the battery is replaced incorrectly. Replace batteries only with the same or equivalent type recommended by the manufacturer. Dispose the used batteries according to the manufacturer's instructions.

Safety Precaution

The following messages are reminders for safety on how to protect your system from damages and extend a long life for the system.

- 1. Check the Cable Voltage**
 - Make sure the range of operating voltage between AC 100V ~ 240V. Otherwise, the system could be damaged.
- 2. Environmental Conditions**
 - Place your PA-J501 on a sturdy, level surface. Be sure to allow enough space to have easy access around the system.
 - Avoid extremely hot or cold place to install the system.
 - Avoid exposure to sunlight for a long period of time or in an airtight space.
 - Avoid the system from any heating device or using it outdoors in a cold winter day.
 - Bear in mind that the operating ambient temperature is from 0 ~ 35°C (32°F ~ 95°F).
 - Avoid moving the system rapidly from a hot place to a cold place and vice versa as condensation may come from inside of system.
 - Place PA-J501 in strong vibration(s) may cause hard disk failure.
 - Don't place the system close to any radio active device in case of signal interference.
- 3. Handling**
 - If the system isn't fully in DOS mode, adjust BIOS setting as the instruction: Advanced Chipset Feature => Boot display => choose "LFP".
 - Avoid putting heavy objects on top of the system.
 - Don't turn the system upside down. This may cause the hard drive to malfunction.
 - Don't allow foreign objects to fall into this product.
 - If water or other liquid spills into this product, unplug the power cord immediately.
- 4. Good Care**
 - When the outside of the case is stained, remove the stain with a neutral washing agent with a cloth.
 - Never use strong agents such as benzene and thinner to clean the system.
 - If heavy stains are present, moisten a cloth with diluted neutral washing agent or with alcohol and then wipe thoroughly with a dry cloth.
 - If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computers.
 - Don't contact the surface of capacitive touch before entering operation system, or capacitive touch may have problems for electrostatics interface.

CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

WARNING! Some internal parts of the system may have high electrical voltage. And therefore we strongly recommend that qualified engineers can open and disassemble the system. The LCD and Touchscreen are easily breakable, please handle them with extra care.

PA-J501

Quick Reference Guide



Ver. Q1

All Rights Reserved. Copyright 2022

Packing Checklist

If you discover any of the items below are damaged or lost, please contact your vendor immediately.

- PA-J501 X 1
- This Quick Reference Guide X 1
- Power Adaptor X 1
- AC Power Cord X 1
- Driver DVD X 1

PA-J501

Specifications


System	CPU Support	Intel® Celeron® J6412 (fanless)
	Memory	1 x DDR4 260-pin SO-DIMM slot (up to 16GB)
	Storage	1 x M.2 2242 / 1 x M.2 2280
	Network	1 x RJ45, 10/ 100/1000 Mbps / 1 x M.2 (Key E, 2230)
	O.S. Support	Windows 10, Windows 11
	Primary Display	15.6", 1366 x 768
	2nd Display	10.1" Monitor with Touch
	Audio	1 x 2W Speaker
	System Weight	POS: 4.23 kg / POS + 2nd Display: 5.33 kg
	Dimensions (WxHxD)	POS: 375.68 x 287.43 x 194.95 mm POS + 2nd Display: 375.68 x 287.43 x 213.26 mm
Storage	SATA	1 x M.2 2242 / 1 x M.2 2280, SATA interface
I/O Ports	Display	1 x Mini DP for Primary/ 2nd display 1 x HDMI 1.4
	USB	Rear I/O: 3 x USB 2.0 / 2 x USB 3.1 Side I/O: USB 2.0
	Serial Ports	2 x RJ45 (all support 5V/12V selectable under BIOS) (RS-232 interface)
	LAN	1 x 2.5G LAN (RJ45)
	Cash Drawer	1 x RJ11 (+12V or +24V selectable) (default at +24V)
	DC In	1 x 4-pin DC power jack (4pin, DIN)
	Option	1 x USB 2.0 or 1 x 24V Power USB (1A) or 1 x DC Out (1A) or 1 x RJ-45 (RS232 interface)
Add-ons	Customer Display	20 columns x 2 lines STN LCD display
	MSR	JIS I,II, ISO Track1+2+3 (USB interface)
	2nd Display	10.1" with P-cap touch
	Fingerprint	Silicon Fingerprint Module (USB interface)
	iButton	iButton module (USB interface)
Scanner	2D scanner (USB interface)	
Display	Primary Display	15.6", TFT LCD (Resolution: 1366 x 768) Brightness: 220 cd/m ²
	Touchscreen	Bezel-free P-CAP touch panel (USB interface)
	2nd Display	10.1" Monitor with Touch
Environment	EMC & Safety	CE / FCC
	Operating Temp.	0°C ~ 35°C (32°F ~ 95°F)
	Storage Temp.	-5°C ~ 60°C (23°F ~ 140°F)
	Humidity	20% ~ 90%

PA-J501


System View

Unit: mm


Front View

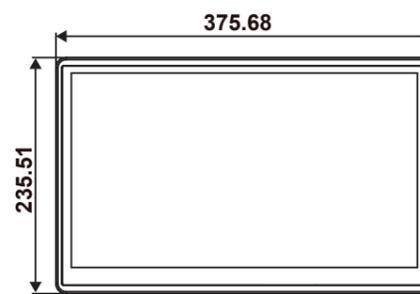


Side View

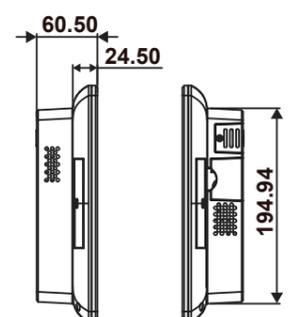

REAR I/O

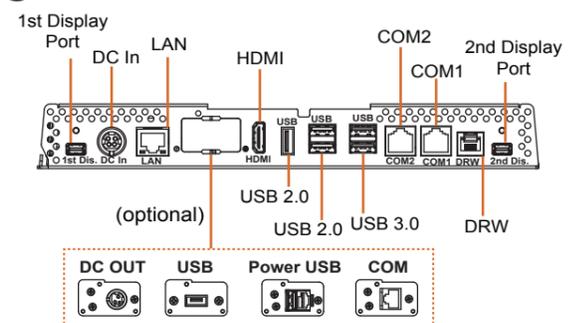

SIDE I/O

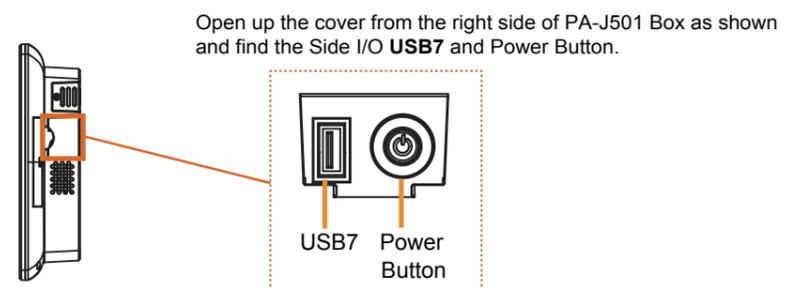


PA-J501 High Performance 15.6" Panel PC


Easy Maintenance

M.2 2280 Maintenance

Step 1: Unscrew M.2 2280 and follow the direction (red arrow) to release the cover.

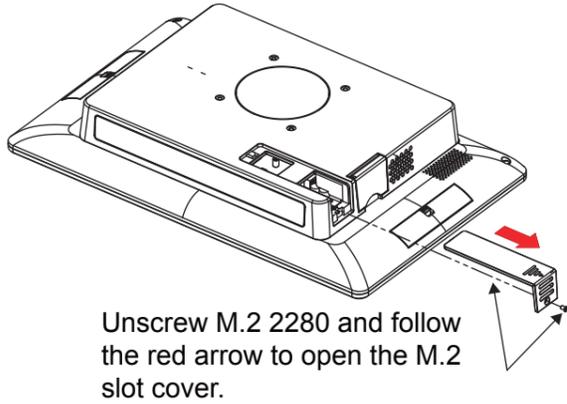


Step 2: Slide a new M.2 2280 into the M.2 slot and fasten up the screw to secure the cover and complete.

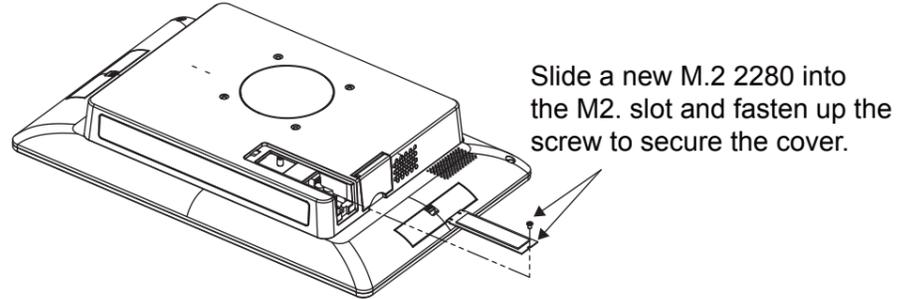


Memory Maintenance


Step 1: Release the 2 screws and unplug the DP cable from the I/O Ports.

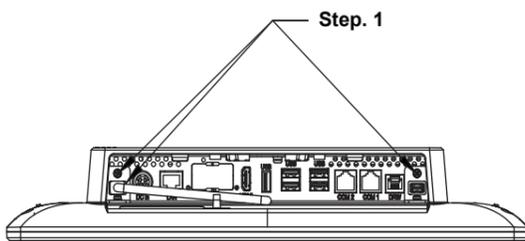


Step 2: Follow the directions (red arrows) below to separate PCB Box from the touchscreen of Panel PC.

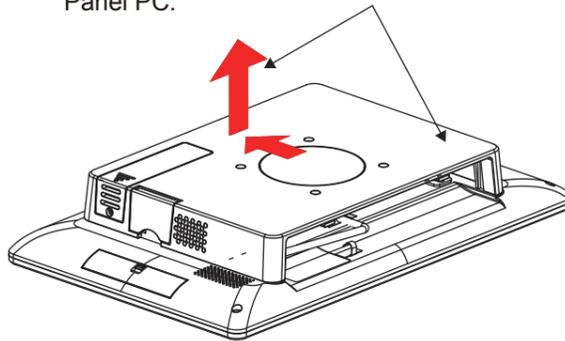


Step 3: Unfasten 5 screws as shown:

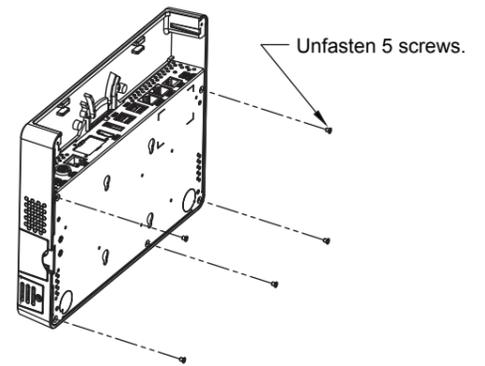

Step 4: Move the PCB box outwards slightly as shown (red arrow) and lay the PCB box down on a flat surface.

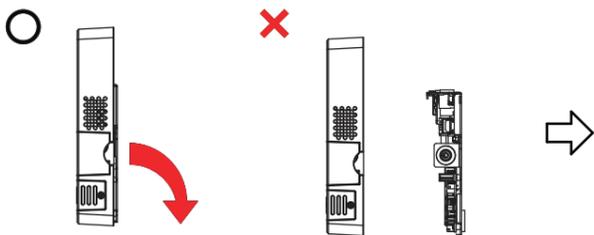

Warning: If you force to move the PCB Box too far away from PPC, the connected cables inside could be damaged.

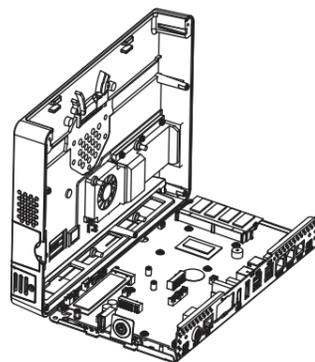


Step 5: Open the cover and unplug all the connected cables.

Step 6: Change the memory and heating pad.

Step 7: Re-connect all the unplugged cables and replace all removed screws in the order you dismantled and complete.

Jumper Setting

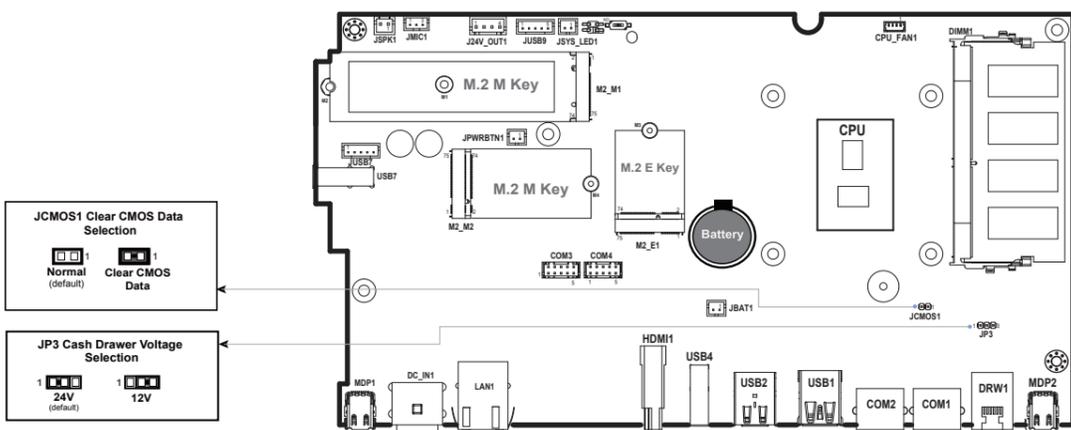

CAUTION! Danger of explosion may occur if the battery is replaced incorrectly. Replace batteries only with the same or equivalent type recommended by the manufacturer. Dispose the used batteries according to the manufacturer's instructions.

Safety Precaution

The following messages are reminders for safety on how to protect your system from damages and extend a long life for the system.

- 1. Check the Cable Voltage**
 - Make sure the range of operating voltage between AC 100V ~ 240V. Otherwise, the system could be damaged.
- 2. Environmental Conditions**
 - Place your PA-J501 on a sturdy, level surface. Be sure to allow enough space to have easy access around the system.
 - Avoid extremely hot or cold place to install the system.
 - Avoid exposure to sunlight for a long period of time or in an airtight space.
 - Avoid the system from any heating device or using it outdoors in a cold winter day.
 - Bear in mind that the operating ambient temperature is from 0 ~ 35°C (32°F ~ 95°F).
 - Avoid moving the system rapidly from a hot place to a cold place and vice versa as condensation may come from inside of system.
 - Place PA-J501 in strong vibration(s) may cause hard disk failure.
 - Don't place the system close to any radio active device in case of signal interference.
- 3. Handling**
 - If the system isn't fully in DOS mode, adjust BIOS setting as the instruction: Advanced Chipset Feature => Boot display => choose "LFP".
 - Avoid putting heavy objects on top of the system.
 - Don't turn the system upside down. This may cause the hard drive to malfunction.
 - Don't allow foreign objects to fall into this product.
 - If water or other liquid spills into this product, unplug the power cord immediately.
- 4. Good Care**
 - If the outside of the case is stained, remove the stain with a neutral washing agent with a cloth.
 - Never use strong agents such as benzene and thinner to clean the system.
 - If heavy stains are present, moisten a cloth with diluted neutral washing agent or with alcohol and then wipe thoroughly with a dry cloth.
 - If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computers.
 - Don't contact the surface of capacitive touch before entering operation system, or capacitive touch may have problems for electrostatics interface.

CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

WARNING! Some internal parts of the system may have high electrical voltage. And therefore we strongly recommend that qualified engineers can open and disassemble the system. The LCD and Touchscreen are easily breakable, please handle them with extra care.